

Mole Assembly Instructions – Mole Basic


Check the contents of the box:



You will need a ½"/13mm spanner or socket and ratchet.

The hose is marked "Maulwurf" and has a black marker pen line at the end that needs attaching to the Mole.

Align the black-line on the hose with the electrical connection. Slide the hose over the metal tube (a drop of liquid soap can help). The hose must be pushed all the way on to the tube.

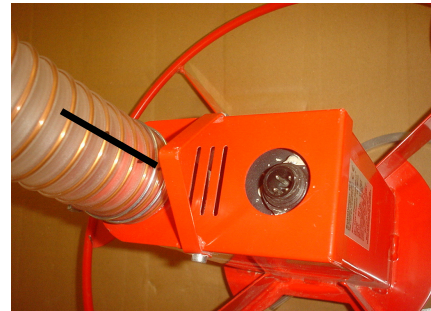

Unscrew the nuts from the bracket of the 'tuning set'



Locate the 'tuning-set' bracket over the hose such that it will clamp onto the tube and NOT crush the spiral wire when it is secured, i.e. the spiral should travel diagonally through the space under the clamp.



The four-pin cable plug is 'keyed', line it up properly and push it firmly on to the Mole's socket. Secure the outer collar tightly.



Now read the Mole Manual and Installation Instructions.