

Fig. 1


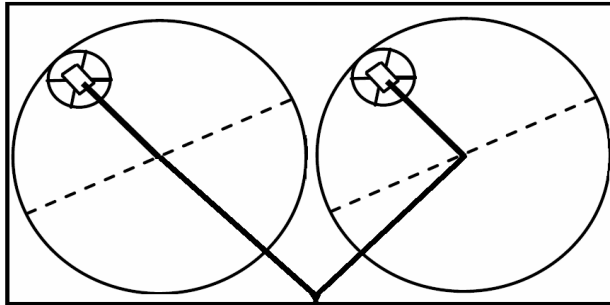


Fig. 2

With rectangular stores you can either suspend the Mole in the centre (Fig. 1) and accept some lack of recoverability (or fit bevels) OR have two suspension points (Fig. 2). The diameter of the described pick-up zone should be such that the Mole just misses the sidewalls. |

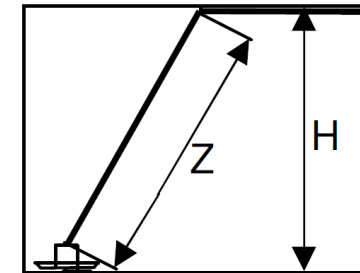

The free tube length ( $Z$ ) (between mole and ceiling fixing) should be only slightly longer than the room height ( $H$ ).

Avoid the risk of the Mole becoming 'bridged' at side-walls

